

03-076



17" CONVEX MIRROR INSTALLATION INSTRUCTIONS

INCLUDED:

Mirror
Mounting Brackets
Hardware Pack



MIRROR



MOUNTING BRACKET

WILL FIT CLUB CAR® PRECEDENT®
WILL FIT CLUB CAR® DS®
WILL FIT YAMAHA® DRIVE®

1

Assemble mounting brackets to mirror and center on vertical canopy mount as shown. Mark mounting holes and remove clamps and mirror. Using a 3/32 Drill bit, drill out marked areas.



2

Using supplied hardware mount mirror and secure.



3

Adjust to desired location.




17" CONVEX MIRROR

WILL FIT E-Z-GO® TXT®
WILL FIT E-Z-GO® RXV®


1

Locate desired location, preferably centered on front strut as shown. Assemble brackets on mirror with mounting holes pointed towards each other. Mark holes with marking pen.

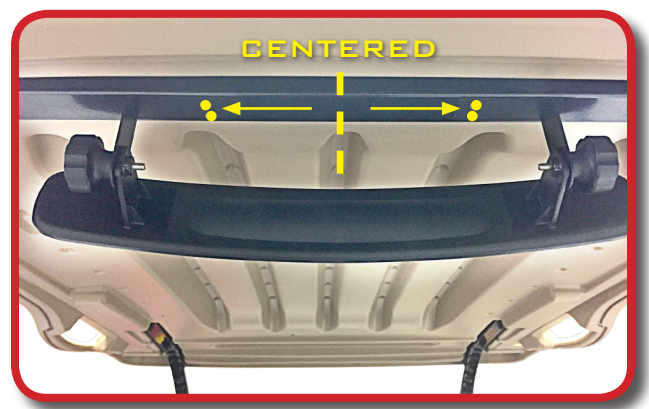

2

Using a 3/32" bit, drill pilot holes at marked locations. Using supplied hardware, attach mirror brackets to strut.

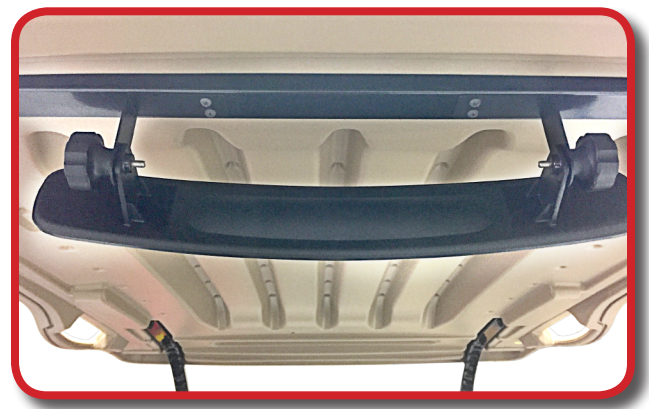

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

INSTALLATION COMPLETE