

MJFX[®]

I N N O V A T I V E



14-022 MJFX ARMOR BRUSH GUARD WILL FIT YAMAHA[®] DRIVE[®] AND HAVOC BODY KIT INSTALLATION INSTRUCTIONS

INCLUDED:
Brush Guard

TOOLS NEEDED:
17mm Socket
17mm Wrench
10mm Socket





MJFX Brush Guard

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.


A) Remove OEM bumper bracket using 10mm socket and retain hardware.

B) Loosen lower A-Arm bolts using 17mm wrench and socket. Do not remove, loosen enough to accommodate for brush guard mount.

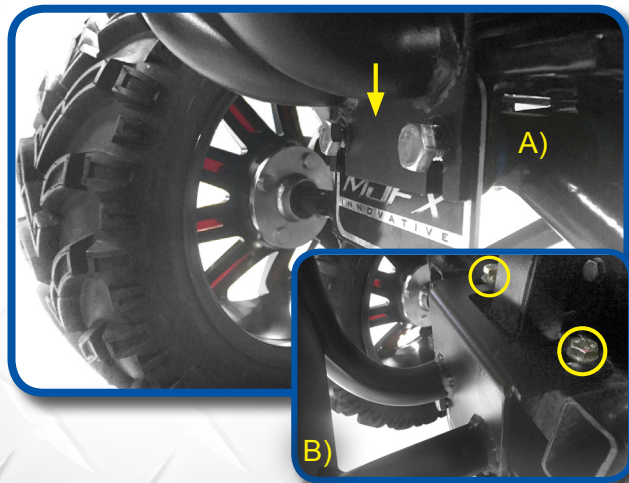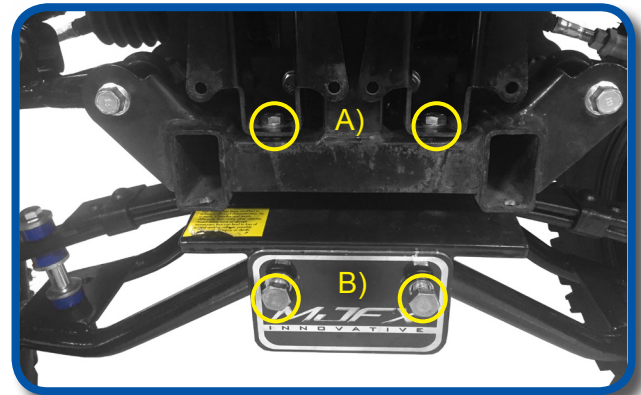


A) Slide Brush Guard mounting slots behind lower arm bracket bolts.

B) Hand thread retained 6mm bolts into OEM Bumper mount holes.

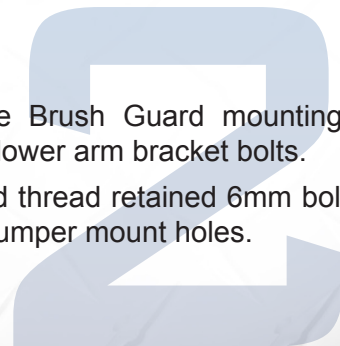

Tighten lower A-Arm bolts using a 17mm socket and wrench. Tighten OEM bumper mount bolts using a 10mm Socket.

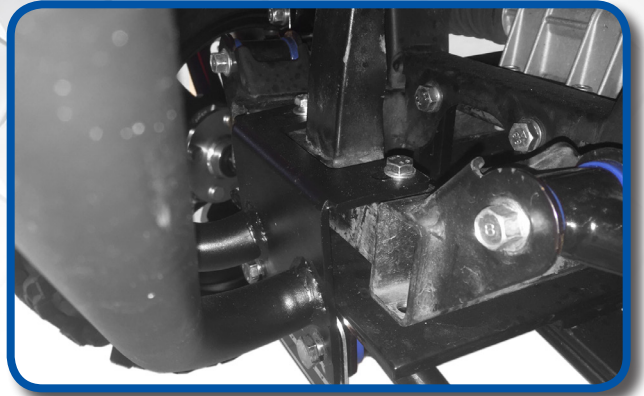

INSTALLATION COMPLETE

E-Z-GO®, E-Z-Go® TXT®, and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company. Any reference to Club Car®, E-Z-Go®, or Yamaha® or their associated trademarks, word marks, and products are only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by either Textron Innovations, Inc., Ingersoll Rand, Inc., Yamaha Golf Cart Company, or any of their parent or subsidiary companies.

